


PA670100

LOTION BOTTLE WALL

MOUNTED 1L TRANSPARENT

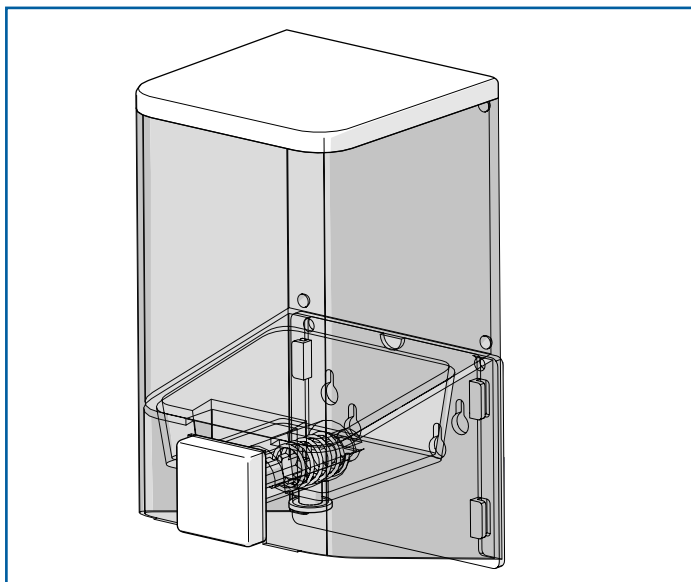

CONTACT DETAILS



Croydex
Central Way
Andover
Hampshire
SP10 5AW
UK



Tel: +44 (0)1264 365881



Email: info@croydex.co.uk



www.croydex.com

**ALL PRODUCT DIMENSIONS DETAILED IN THIS
INSTALLATION AND MAINTENANCE MANUAL
ARE APPROXIMATE**

**ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR
REFERENCE ONLY. COMPONENTS SUPPLIED
WITH INDIVIDUAL PRODUCTS MAY DIFFER**

INTRODUCTION

Thank you for purchasing this Croydex product. Please follow all assembly and product care instructions to ensure that your product is assembled safely and retains its high quality finish.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE



PRODUCT CAPACITY


This product has a capacity of
1 LITRE

SAFETY & PRODUCT CARE


1. **ALWAYS** take care when using power tools, particularly if there is any water in the working area.
2. **ALWAYS** wear eye protection when using power tools.
3. **ALWAYS** check for pipes and cables before drilling into walls.
4. **ALWAYS** use a ceramic drill bit when drilling into tiled surfaces.
5. **ALWAYS** use a drill bit that is suitable for the surface that is being drilled.
6. The wall plugs supplied are for use on solid walls only. For cavity walls or plasterboard **ALWAYS** use specialist fixings that are suitable for the type of wall construction.
7. **DO NOT** use abrasive or chemical cleaners as these may damage the product.

PRODUCT FITTING


IMPORTANT! : Before attempting to fit or use this product. Ensure that it fits and functions in the desired location.

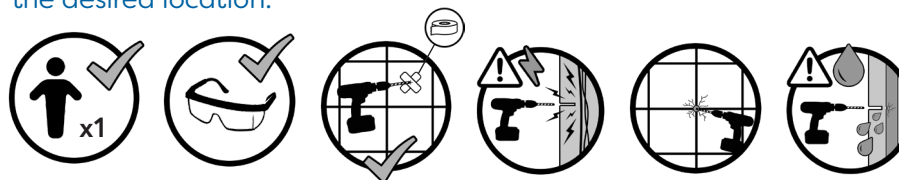

WALL FIXING PACK




x2 wall
screws

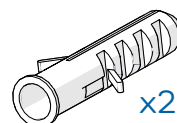


x2 wall
plugs


TOOLS REQUIRED




1. Place the bracket against the wall in the desired position. Place the spirit level along the top of the bracket, level and mark the hole centres for drilling. **(See Fig. 1)**

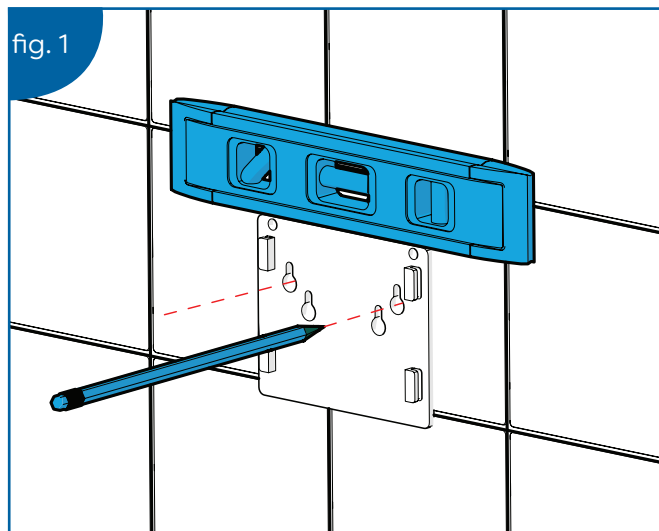


2. Drill the holes to a depth of 34mm in the marked positions using a 7mm masonry drill. If the product is being fitted onto a ceramic tiled wall - a ceramic drill bit should be used. **(See Fig. 2)**

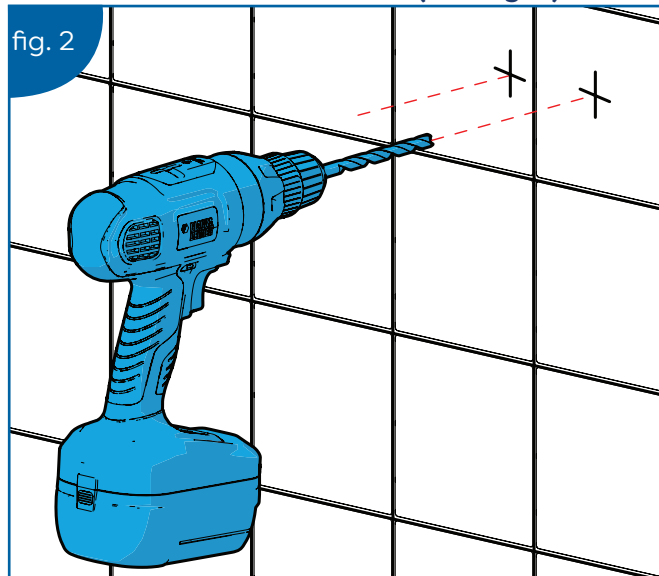


3. Insert the wall plugs flush to the wall surface. If fitting to a tiled surface the wall plugs should be inserted below the surface of the tile to avoid cracking. **(See Fig. 3)**

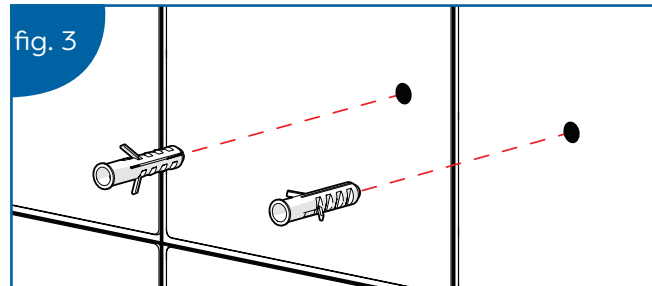


4. Insert the wall screws into the wall plugs. Tighten with a cross head screwdriver until the screw heads are approximately 5mm from the wall surface. **(See Fig. 4)**

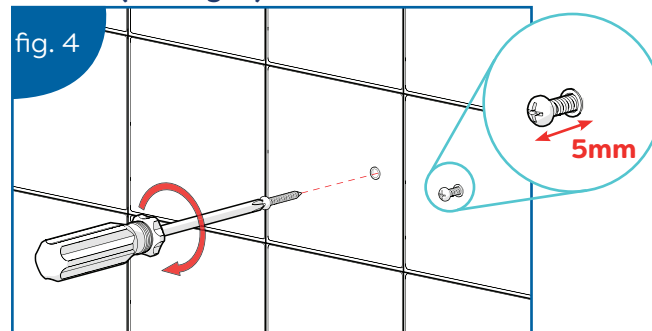

5. Slide the wall bracket down onto the screws to lock into place. **(See Fig. 5)**

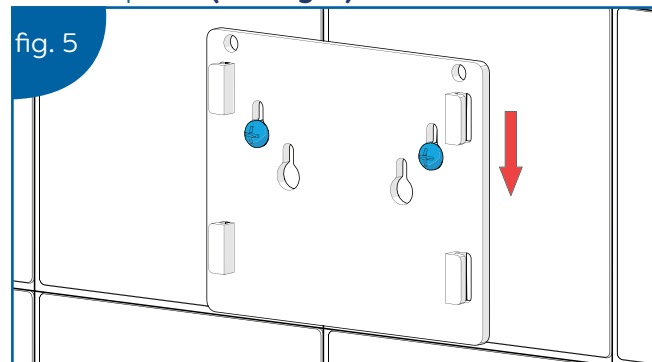

6. Tighten the screws to lock the bracket in place. Do not overtighten. **(See Fig. 6)**

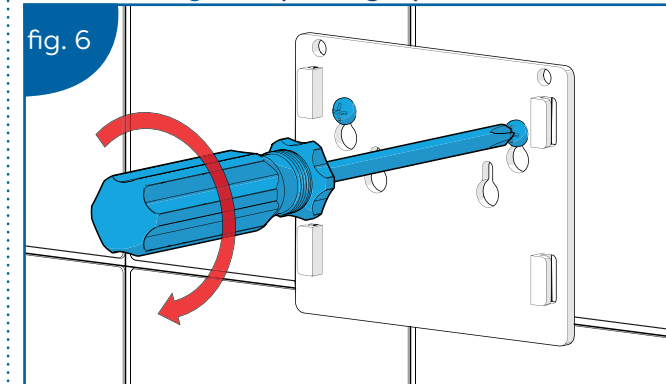

7. Slide dispenser unit down onto the wall bracket. Check that the product is securely fixed to the mounting surface before use. **(See Fig. 7)**

