
PA670222

SLIM LINE WALL MOUNTED SOAP DISPENSER

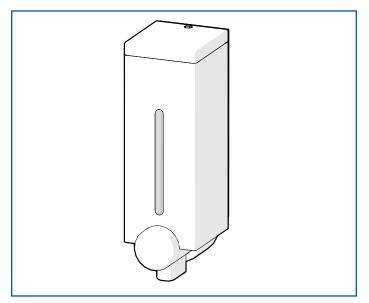

CONTACT DETAILS







www.croydex.com

ALL PRODUCT DIMENSIONS DETAILED IN THIS INSTALLATION AND MAINTENANCE MANUAL ARE APPROXIMATE

ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR REFERENCE ONLY. COMPONENTS SUPPLIED WITH INDIVIDUAL PRODUCTS MAY DIFFER



INTRODUCTION

Thank you for purchasing this Croydex product. Please follow all assembly and product care instructions to ensure that your product is assembled safely and retains it's high quality finish.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE



PRODUCT CAPACITY

This product has a capacity of **0.45 LITRE**

SAFETY & PRODUCT CARE

- 1. ALWAYS take care when using power tools, particularly if there is any water in the working area.
- 2. ALWAYS wear eye protection when using power tools.
- 3. ALWAYS check for pipes and cables before drilling into walls.
- 4. ALWAYS use a ceramic drill bit when drilling into tiled surfaces.
- **5. ALWAYS** use a drill bit that is suitable for the surface that is being drilled.
- **6.** The wall plugs supplied are for use on solid walls only. For cavity walls or plasterboard **ALWAYS** use specialist fixings that are suitable for the type of wall construction.
- 7. DO NOT use abrasive or chemical cleaners as these may damage the product.

PRODUCT FITTING

IMPORTANT!: Before attempting to fit or use this product. Ensure that it fits and functions in the desired location.







x2 wall

plugs






TOOLS REQUIRED



WALL FIXING PACK



....










1 S&H 079 R02

SECTION 3 - INSTALLATION


INSTALLING THE WALL BRACKET

- **1. BEFORE INSTALLING** the wall bracket, ensure that the safety warnings in section 1 are followed.
- **2.** Place the bracket against the wall in the desired position. Place the spirit level along the top of the bracket, level and mark the hole centres for drilling. (See Fig. 1)

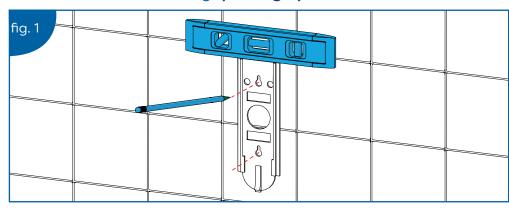


3. Drill the holes to a depth of 34mm in the marked positions using a 7mm masonry drill. If the product is being fitted onto a ceramic tiled wall - a ceramic drill bit should be used.

(See Fig. 2)

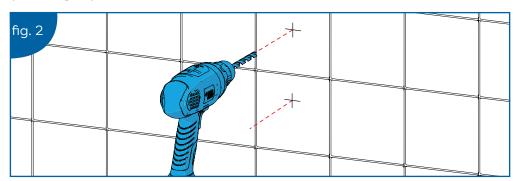


4. Insert the wall plugs flush to the wall surface. If fitting to a tiled surface the wall plugs should be inserted below the surface of the tile to avoid cracking.

(See Fig. 3)

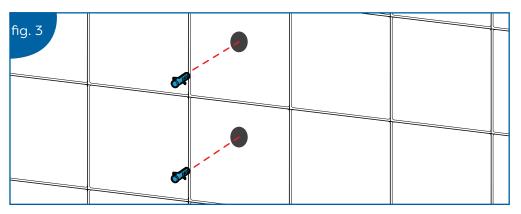

5. Insert the wall screws into the wall plugs and tighten with a cross head screwdriver until the screw heads are approximately 5mm from the wall surface.


(See Fig. 4)

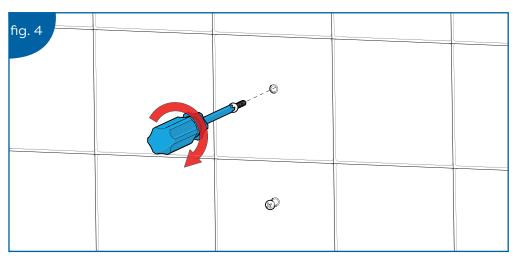


S&H 079 R02

SECTION 3 - INSTALLATION


6. Slide the wall bracket down onto the screws to lock into place. **(See Fig. 5)**

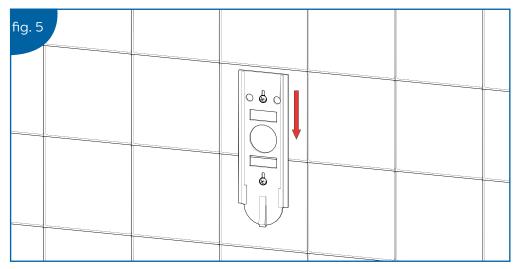

7. Tighten the screws to lock the bracket in place. Do not overtighten. (See Fig. 6)

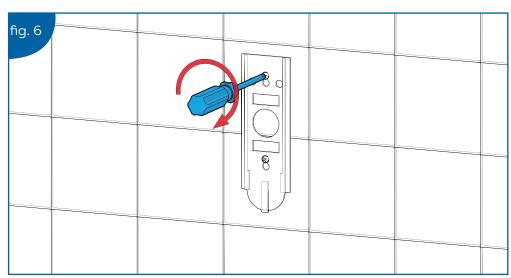


8. Slide dispenser unit down onto the wall bracket. Check that the product is securely fixed to the mounting surface before use (See Fig. 7)

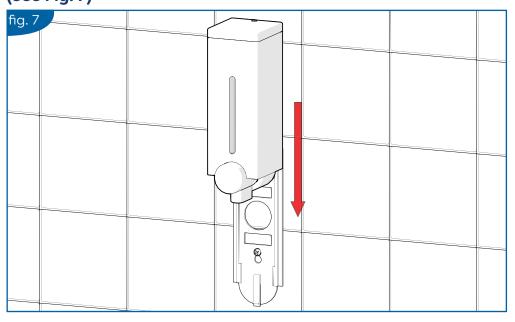

9. To unlock/lock the dispenser for refilling. Use the included key - turn clockwise to lock and anti-clockwise to unlock the dispenser.

(See Fig. 8)

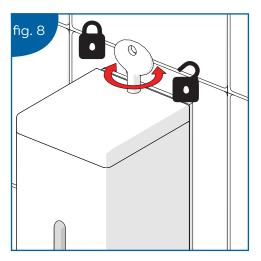

S&H 079 R01