


SHOWER SHELF WITH WIPER BLADE

QM950022

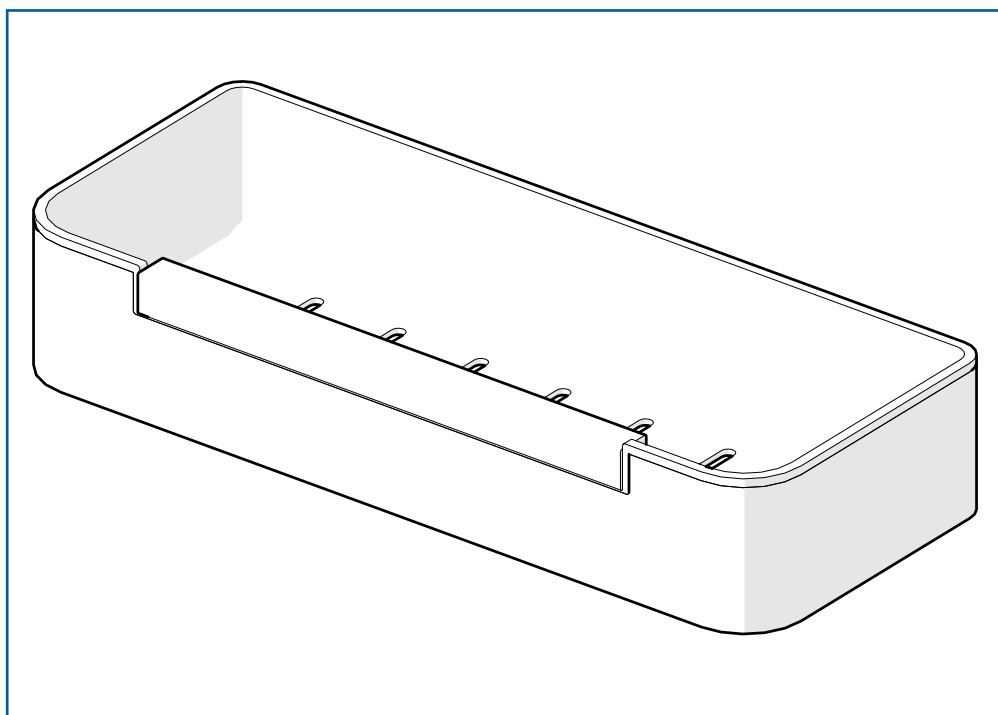

**ALL PRODUCT DIMENSIONS DETAILED IN THIS INSTALLATION
AND MAINTENANCE MANUAL ARE APPROXIMATE**

**ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR REFERENCE
ONLY. COMPONENTS SUPPLIED WITH INDIVIDUAL PRODUCTS
MAY DIFFER**

TABLE OF CONTENTS

SECTION	CONTENTS	PAGE
1	INTRODUCTION	2
2	PRE-INSTALLATION	2
3	INSTALLING THE STRAIGHT SHELF	3 - 4

CONTACT DETAILS

Croydex
Central Way
Andover
Hampshire
SP10 5AW
UK

Tel: +44 (0)1264 365881
Email: info@croydex.co.uk

www.croydex.com

SECTION 1 - INTRODUCTION

INTRODUCTION

Thank you for purchasing this Croydex product. Please follow all assembly and product care instructions to ensure that your product is assembled safely and retains it's high quality finish.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE

SAFETY & PRODUCT CARE

1. **ALWAYS** take care when using power tools, particularly if there is any water in the working area.
2. **ALWAYS** wear eye protection when using power tools.
3. **ALWAYS** check for pipes and cables before drilling into walls.
4. **ALWAYS** use a ceramic drill bit when drilling into tiled surfaces.
5. **ALWAYS** use a drill bit that is suitable for the surface that is being drilled.
6. The wall plugs supplied are for use on solid walls only. For cavity walls or plasterboard **ALWAYS** use specialist fixings that are suitable for the type of wall construction.
7. **DO NOT** use abrasive or chemical cleaners as these may damage the product.




SECTION 2 - PRE-INSTALLATION

PRODUCT FITTING


IMPORTANT!

Before attempting to install this product, ensure that it fits and will function in the desired location.

WALL FIXING PACK

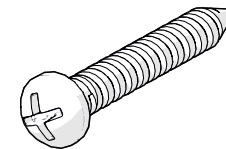

x2 wall screws

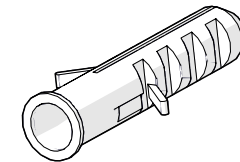

x2 wall plugs

TOOLS REQUIRED




SECTION 3 - INSTALLATION


INSTALLING THE STRAIGHT SHELF

1. BEFORE INSTALLING the wall bracket, ensure that the safety warnings in section 1 are followed.

2. Place the bracket against the wall in the desired position. Place the spirit level along the top of the bracket, level and mark the hole centres for drilling. **(See Fig. 1)**

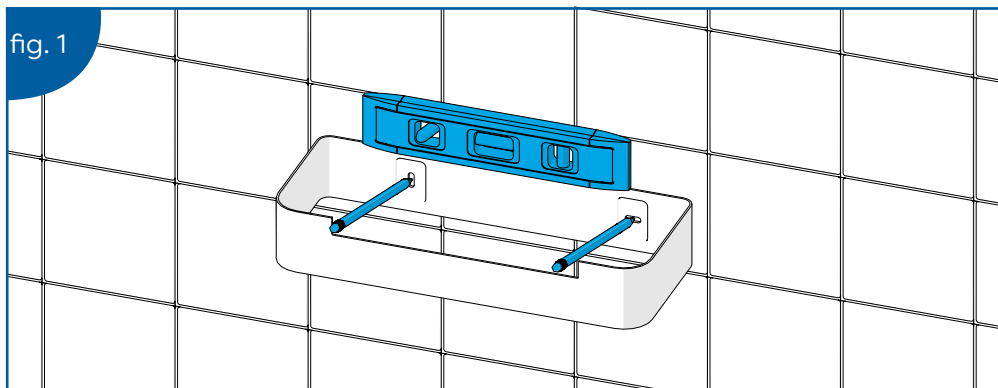


3. Drill the holes to a depth of 32mm in the marked positions using a 6mm masonry drill. If the product is being fitted onto a ceramic tiled wall - a ceramic drill bit should be used. **(See Fig. 2)**

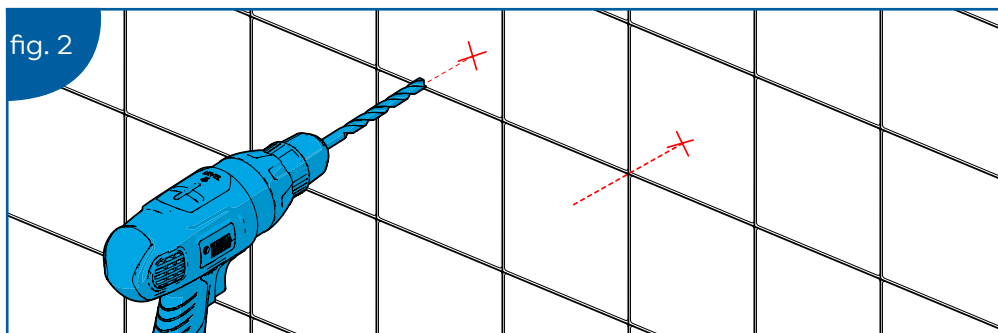


4. Insert the wall plugs flush to the wall surface. If fitting to a tiled surface the wall plugs should be inserted below the surface of the tile to avoid cracking.

(See Fig. 3)

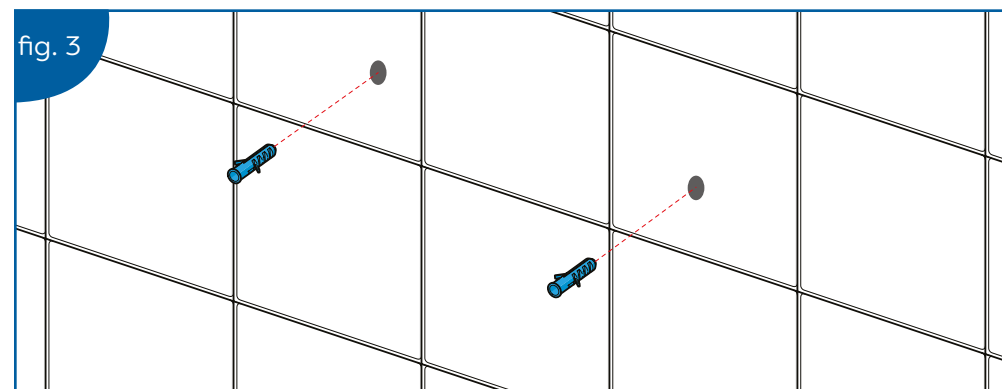


5. Insert the wall screws through the slots in the wall bracket and tighten until the wall bracket is held in place but can still be adjusted.

(See Fig. 4)

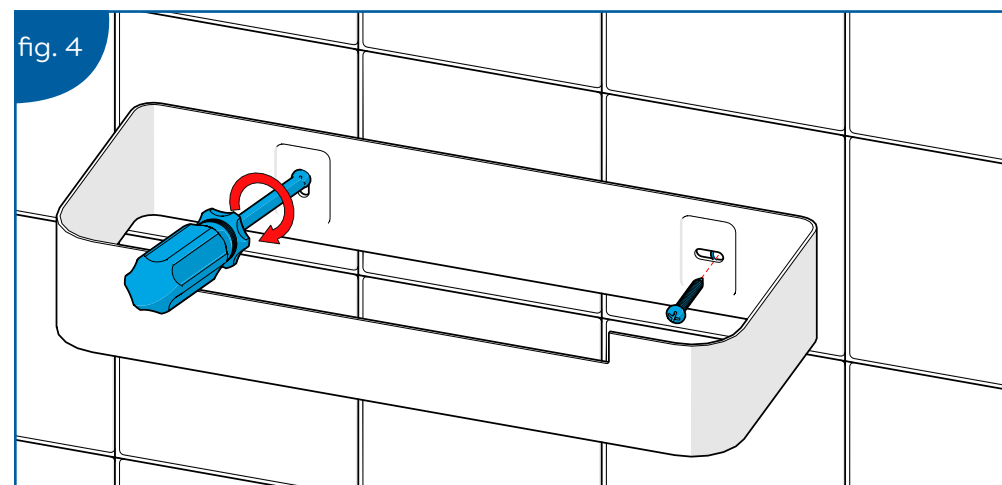


SECTION 3 - INSTALLATION


6. Check that the wall bracket is level. Use the slots to adjust the levelling if necessary. (See Fig. 5)

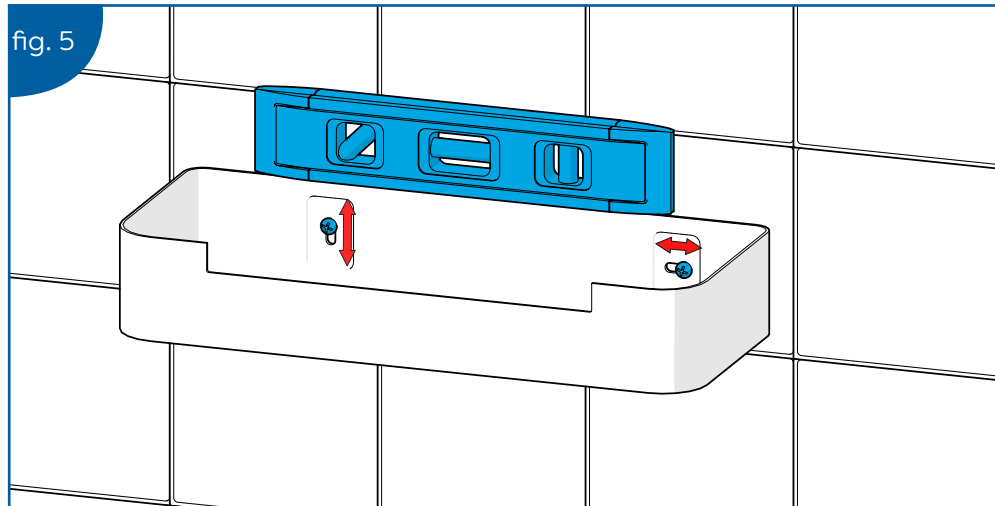

7. Tighten the screws to lock the bracket in place. Do not overtighten. (See Fig. 6)

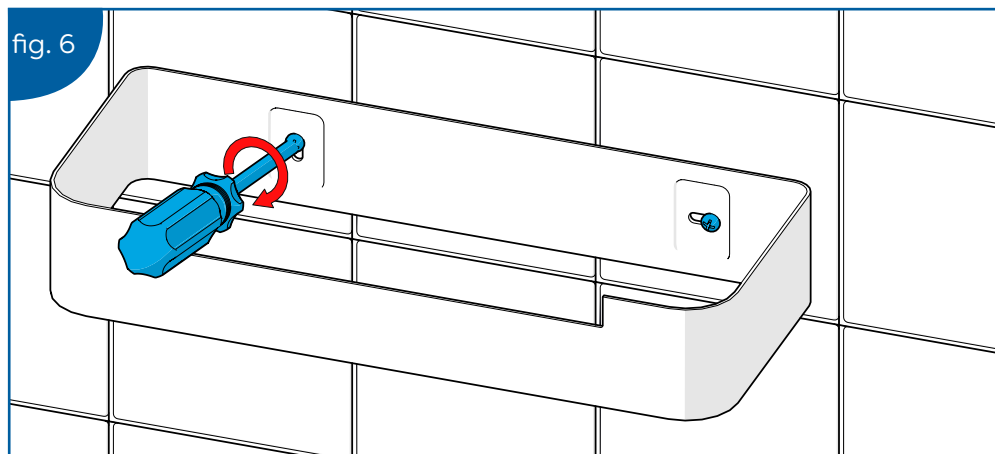

8. Install the inner plastic enclosure. (See Fig. 7)

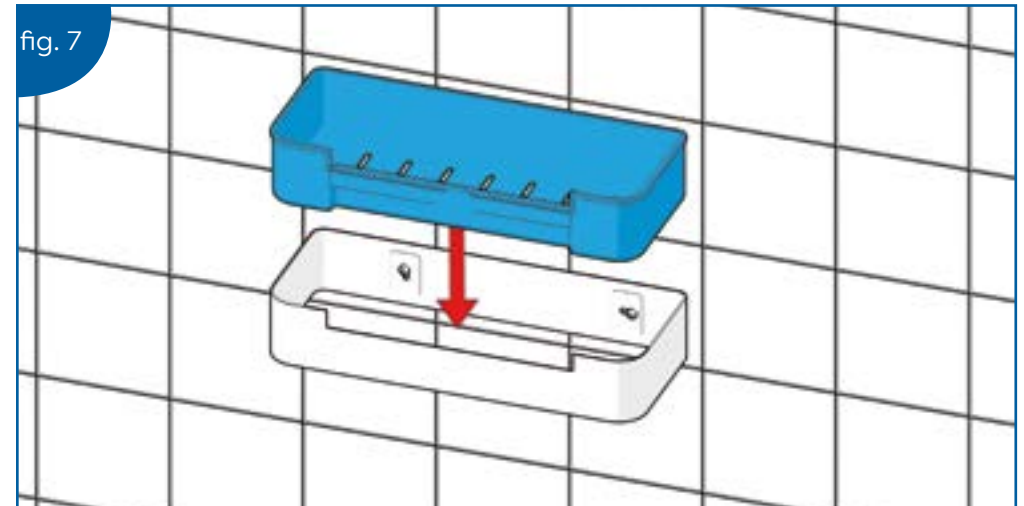

9. Install the wiper into the recess located at the front of the enclosure. (See Fig. 8)

